

# RECORDING MIXER



# RS-802

<b>1</b> MIC  LINE  GAIN 	<b>2</b> MIC  LINE  GAIN 	<b>3</b> MIC  LINE  GAIN 	<b>4</b> MIC  LINE  GAIN 
---	---	---	---



<b>STEREO AUX RETURN</b> L/MONO 	<b>AUX SEND</b> R 
<b>LINE 5-6</b> MONO L 	<b>LINE 7-8</b> MONO L 
<b>R</b> 	<b>R</b> 

<b>MAIN OUT</b> L 	<b>CTRL R OUT</b> L 	<b>PHONES</b> 
<b>R</b> 	<b>R</b> 	

<b>EQ</b> HIGH 12 kHz 	<b>EQ</b> HIGH 12 kHz 	<b>EQ</b> HIGH 12 kHz 	<b>EQ</b> HIGH 12 kHz 	<b>EQ</b> HIGH 12 kHz 	<b>EQ</b> HIGH 12 kHz 
<b>EQ</b> MID 2.5 kHz 	<b>EQ</b> MID 2.5 kHz 	<b>EQ</b> MID 2.5 kHz 	<b>EQ</b> MID 2.5 kHz 	<b>EQ</b> MID 2.5 kHz 	<b>EQ</b> MID 2.5 kHz 
<b>EQ</b> LOW 80 Hz 	<b>EQ</b> LOW 80 Hz 	<b>EQ</b> LOW 80 Hz 	<b>EQ</b> LOW 80 Hz 	<b>EQ</b> LOW 80 Hz 	<b>EQ</b> LOW 80 Hz 
<b>AUX</b> 	<b>AUX</b> 	<b>AUX</b> 	<b>AUX</b> 	<b>AUX</b> 	<b>AUX</b> 
<b>PAN</b> L R PEAK 	<b>PAN</b> L R PEAK 	<b>PAN</b> L R PEAK 	<b>PAN</b> L R PEAK 	<b>BAL</b> L R 	<b>BAL</b> L R 
<b>LEVEL</b> -∞ +10 	<b>LEVEL</b> -∞ +10 	<b>LEVEL</b> -∞ +10 	<b>LEVEL</b> -∞ +10 	<b>LEVEL</b> -∞ +10 	<b>LEVEL</b> -∞ +10 
<b>1</b>	<b>2</b>	<b>3</b>	<b>4</b>	<b>5-6</b>	<b>7-8</b>

<b>IN</b> L 	<b>OUT</b> L 
<b>R</b> 	<b>R</b> 
<b>TAPE</b> 	
<b>SEND</b> -∞ +10 	<b>RETURN</b> -∞ +10 
<b>AUX</b> 	
<b>LEVEL</b> -∞ +10 	<b>LEVEL</b> -∞ +10 
<b>PHONES</b>	<b>MAIN MIX</b>

<b>+48V POWER</b>									
<b>+48V</b>									
<b>TAPE TO CTRL ROOM</b>									
<b>TAPE TO MAIN MIX</b>									

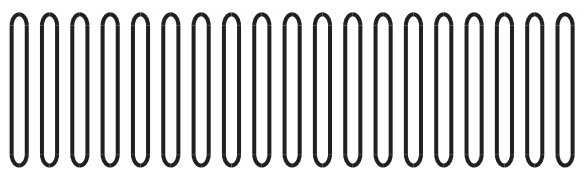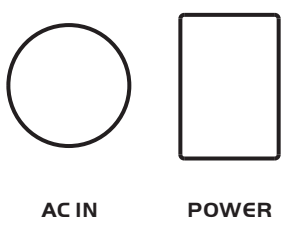

Typ/Type: Spannungsversorgung: Power supply: Gesamtanschlusswert (max.): Power consumption (max.):	OMNITRONIC RS-802 2 x 20 V AC, 50/60 Hz - 15 W
<a href="http://www.omnitronic.com">www.omnitronic.com</a>	