



OMNITRONIC BD-1350

Belt-drive turntable

Service-manual

Serviceunterlagen

Documents techniques


Documentos de servicio

Version 2.0


Spare-parts list

No.	Designation - German	Designation - English	Designation - French	Designation - Spanish	Sheet/Pos.
E0197410	Platine für BD-1350 (Hauptplatine)	PCB for BD-1350 (Main PCB)	Platine für BD-1350 (Hauptplatine)	Platine für BD-1350 (Hauptplatine)	23
E0197411	Platine für BD-1350 (PLAY/STOP)	PCB for BD-1350 (PLAY/STOP)	Platine für BD-1350 (PLAY/STOP)	Platine für BD-1350 (PLAY/STOP)	24
E0197412	Platine für BD-1350 (33/45 RPM)	PCB for BD-1350 (33/45 RPM)	Platine für BD-1350 (33/45 RPM)	Platine für BD-1350 (33/45 RPM)	28
E0197413	Glimmlampe für Strobe-Beleuchtung BD-1350	Strobe lamp for BD-1350	Lampe stroboscopique pour BD-1350	Lámpara strobe para BD-1350	12
E0197414	START/STOP-Taster für BD-1350	START/STOP-contact switch for BD-1350	START/STOP-Interrupteur pour BD-1350	START/STOP-pulsador para BD-1350	14
E0197415	33/45 RPM-Taster für BD-1350	33/45 RPM-contact switch for BD-1350	33/45 RPM-Interrupteur pour BD-1350	33/45 RPM-pulsador para BD-1350	27
E0197416	Trafo für BD-1350	Transformer for BD-1350	Transformateur pour BD-1350	Transformador para BD-1350	65
E0197417	Motor für BD-1350	Motor for BD-1350	Moteur pour BD-1350	Motor para BD-1350	79
E0197418	Spannungswahlschalter für BD-1350	Tension-setting switch for BD-1350	Interr.p.choisir la tension BD-1350	Inter.p.seleccionar la tension BD-1350	88
E0197425	Antriebsriemen für BD-1350	Driving-belt for BD-1350	Courroie pour BD-1350	Correa de transmisión para BD-1350	8
E0197430	Tonarm für BD-1350	Tone-arm for BD-1350	Bras de lecture pour BD-1350	Brazo del fonocaptor para BD-1350	45
E0197440	Abdeckhaube für BD-1350	Dust-cover for BD-1350	Couvercle pour BD-1350	Cubierta para BD-1350	3
E0197442	Puck für BD-1350	Puck for BD-1350	Puck pour BD-1350	Puck para BD-1350	7
E0197466	Plattenteller für BD-1350	Platter for BD-1350	Plateau pour BD-1350	Plato para BD-1350	4
E0197470	START/STOP-Knopf für BD-1350	START/STOP-button for BD-1350	START/STOP-bouton pour BD-1350	START/STOP-botón para BD-1350	13
E0197471	45 RPM-Knopf für BD-1350	45 RPM-button for BD-1350	45 RPM-bouton pour BD-1350	45 RPM-botón para BD-1350	25
E0197472	33 RPM-Knopf für BD-1350	33 RPM-button for BD-1350	33 RPM-bouton pour BD-1350	33 RPM-botón para BD-1350	53
E0197473	POWER-Knopf für BD-1350	POWER-button for BD-1350	POWER-bouton pour BD-1350	POWER-botón para BD-1350	9
E0197474	Faderknopf für BD-1350	Fader knob for BD-1350	Bouton fader pour BD-1350	Botón fader para BD-1350	20
E0197480	Tonarmgewicht für BD-1350	Counterweight for BD-1350	Contrepoids pour BD-1350	Contrapeso para BD-1350	46


BLOCK DIAGRAM

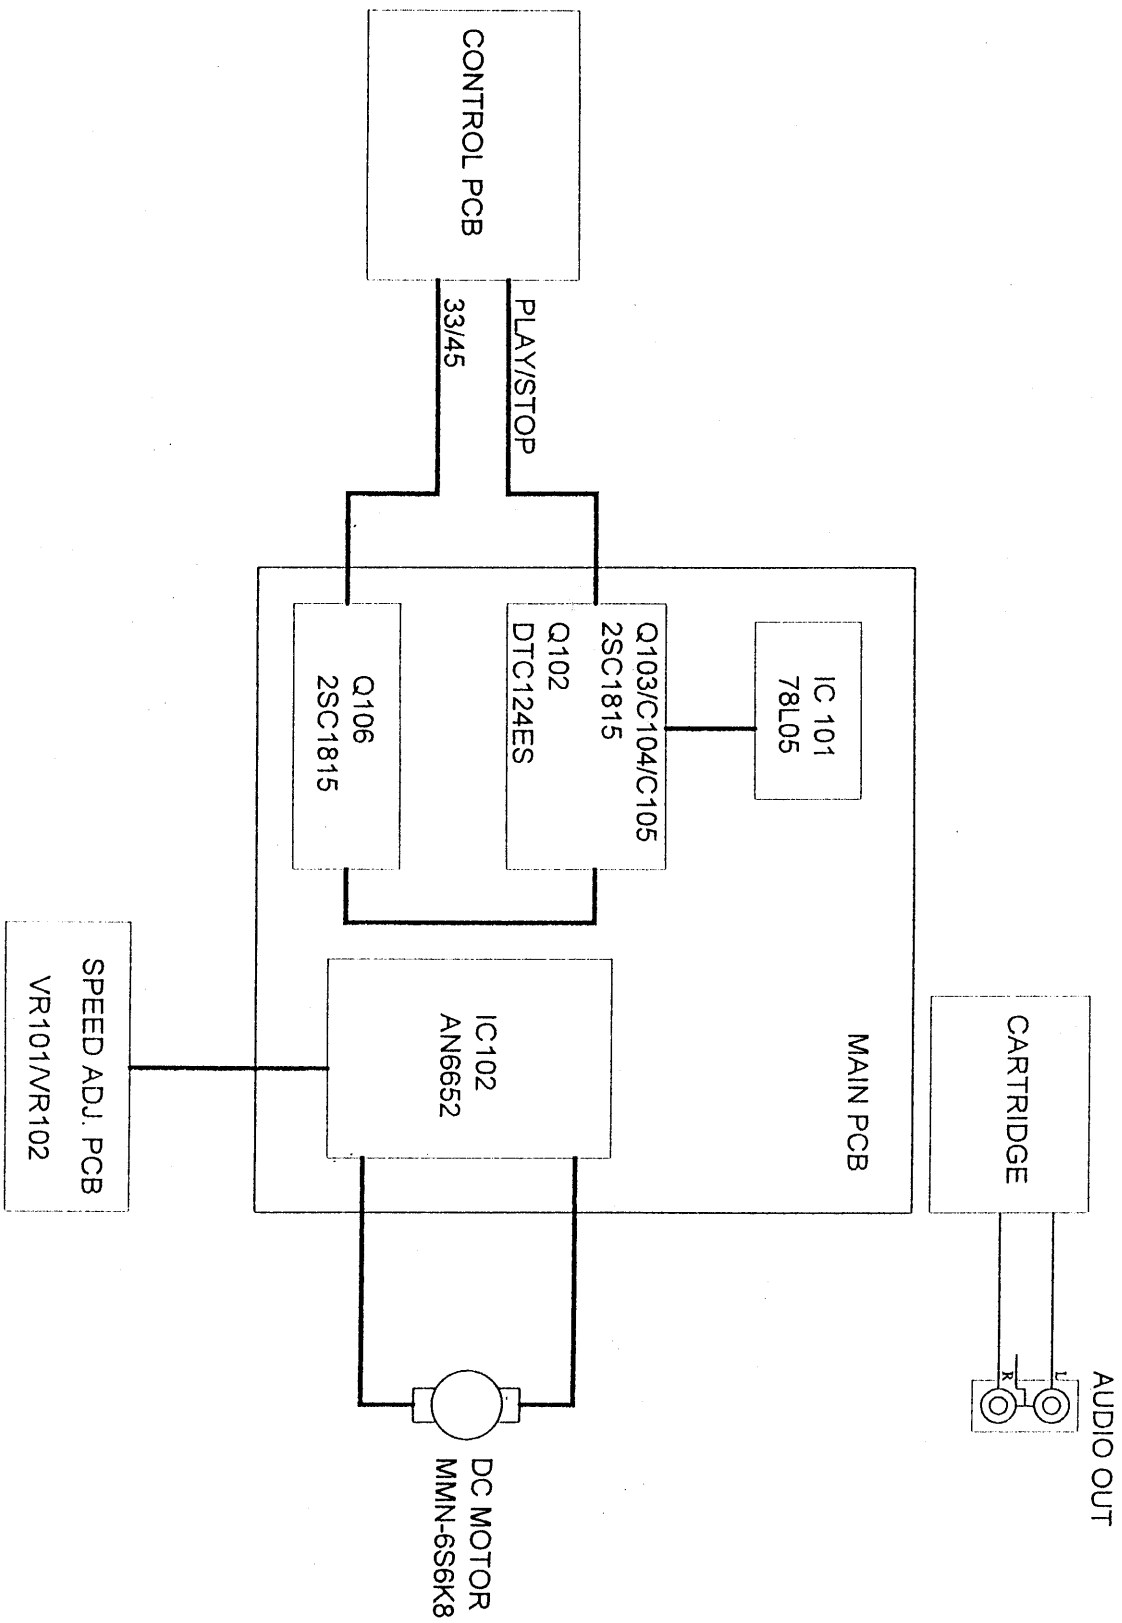

POINT TO POINT WIRING DIAGRAM

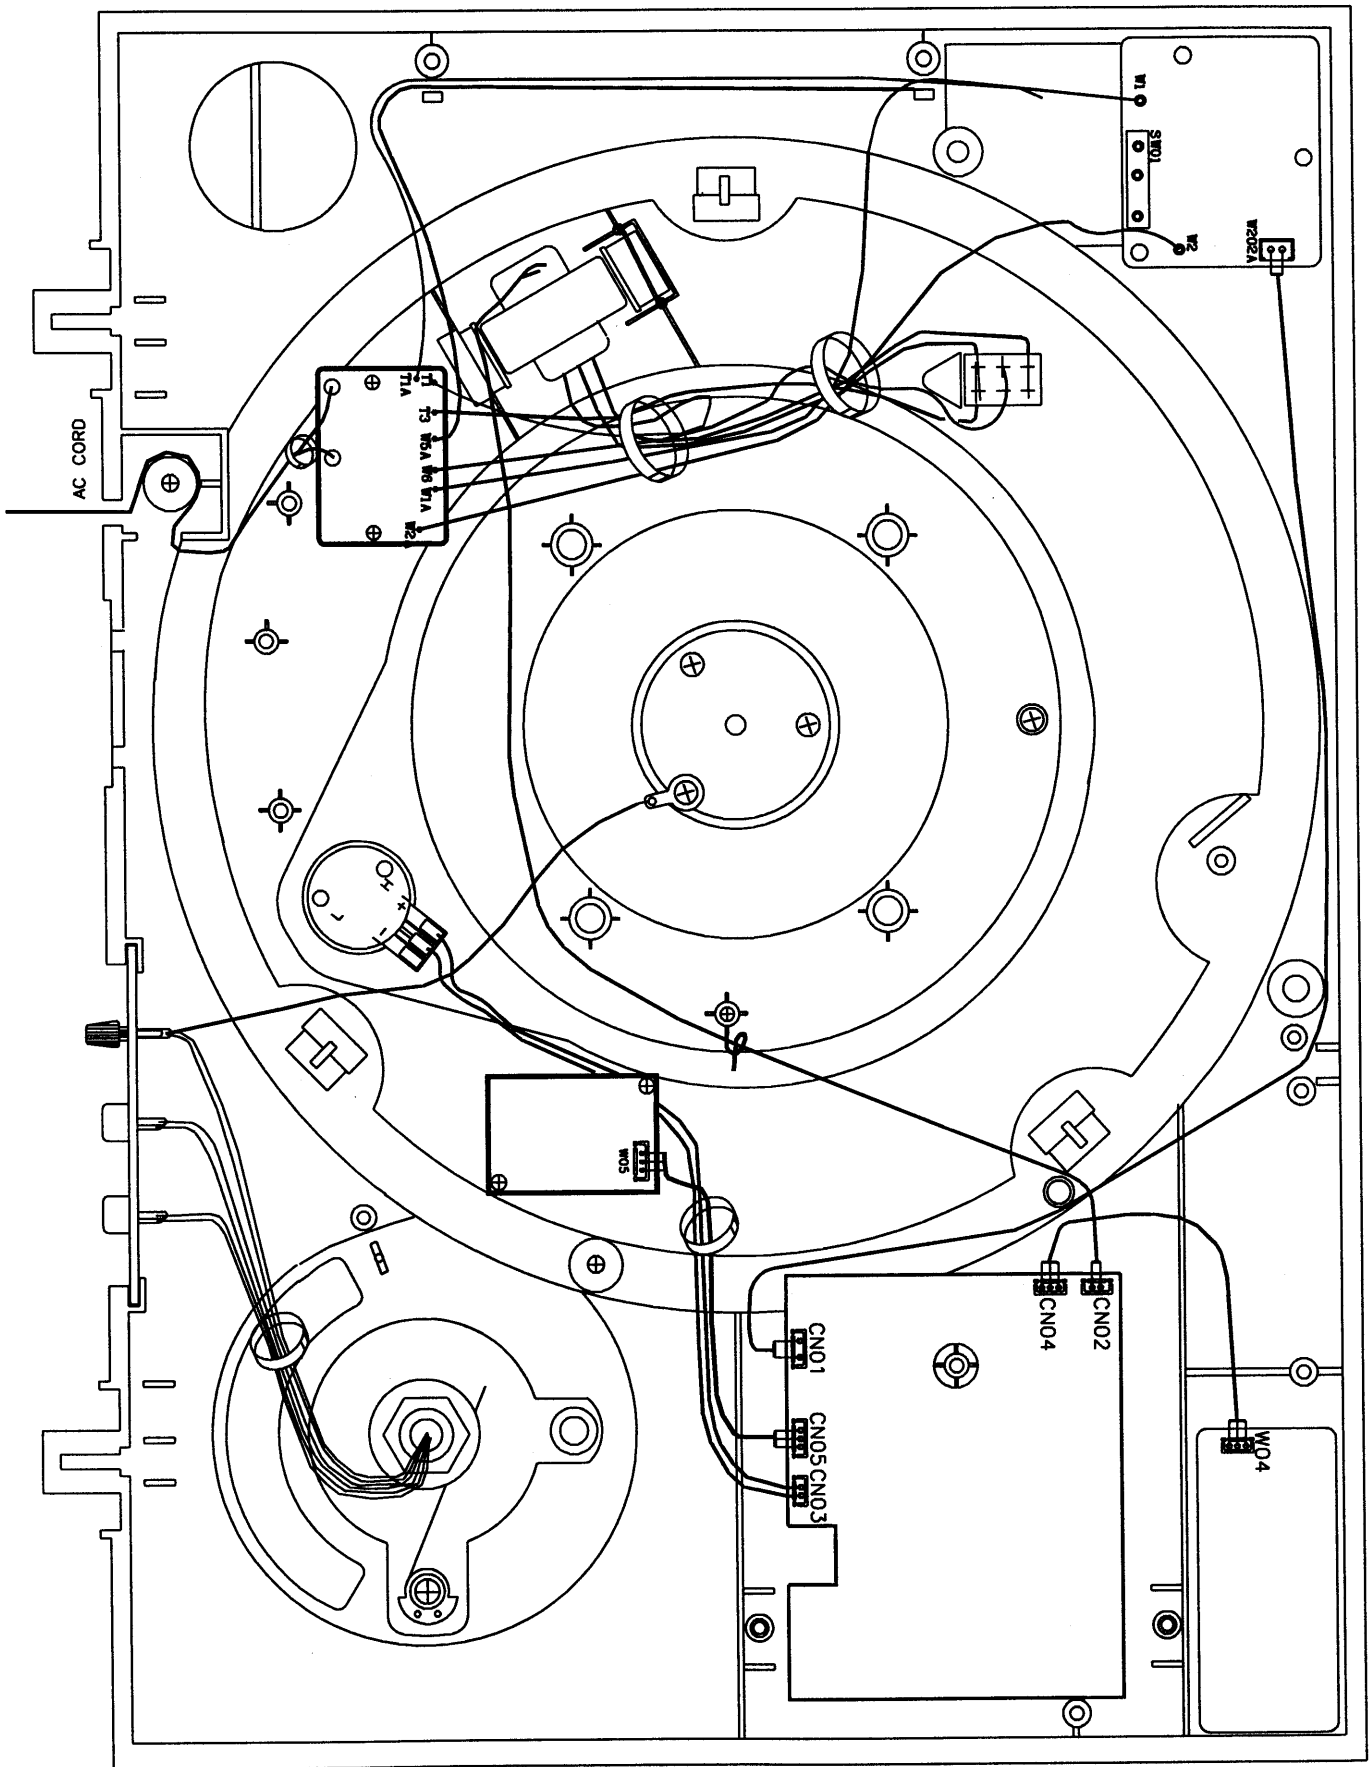


EXPLODED VIEW

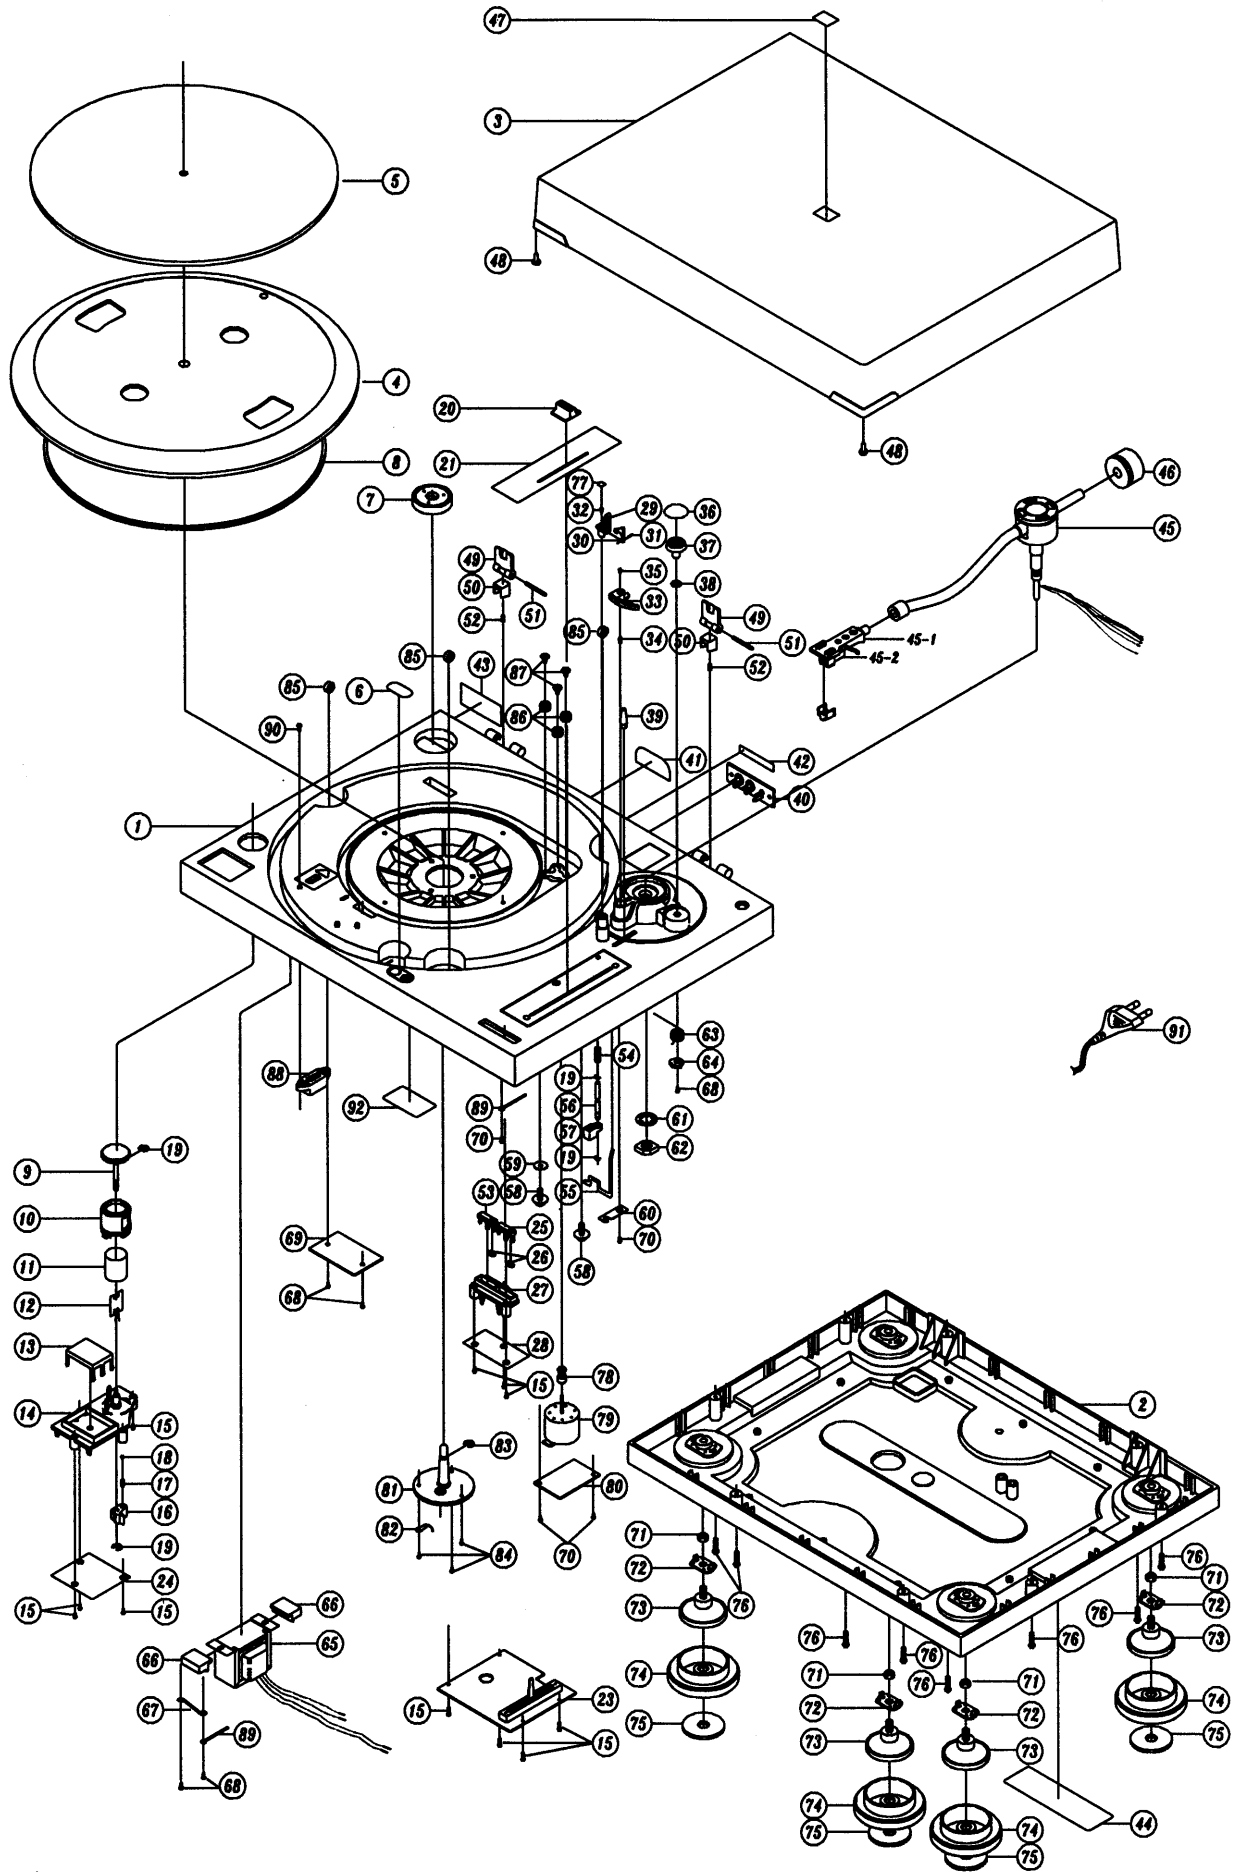

BJ-25F/C

SCHEMATIC DIAGRAM

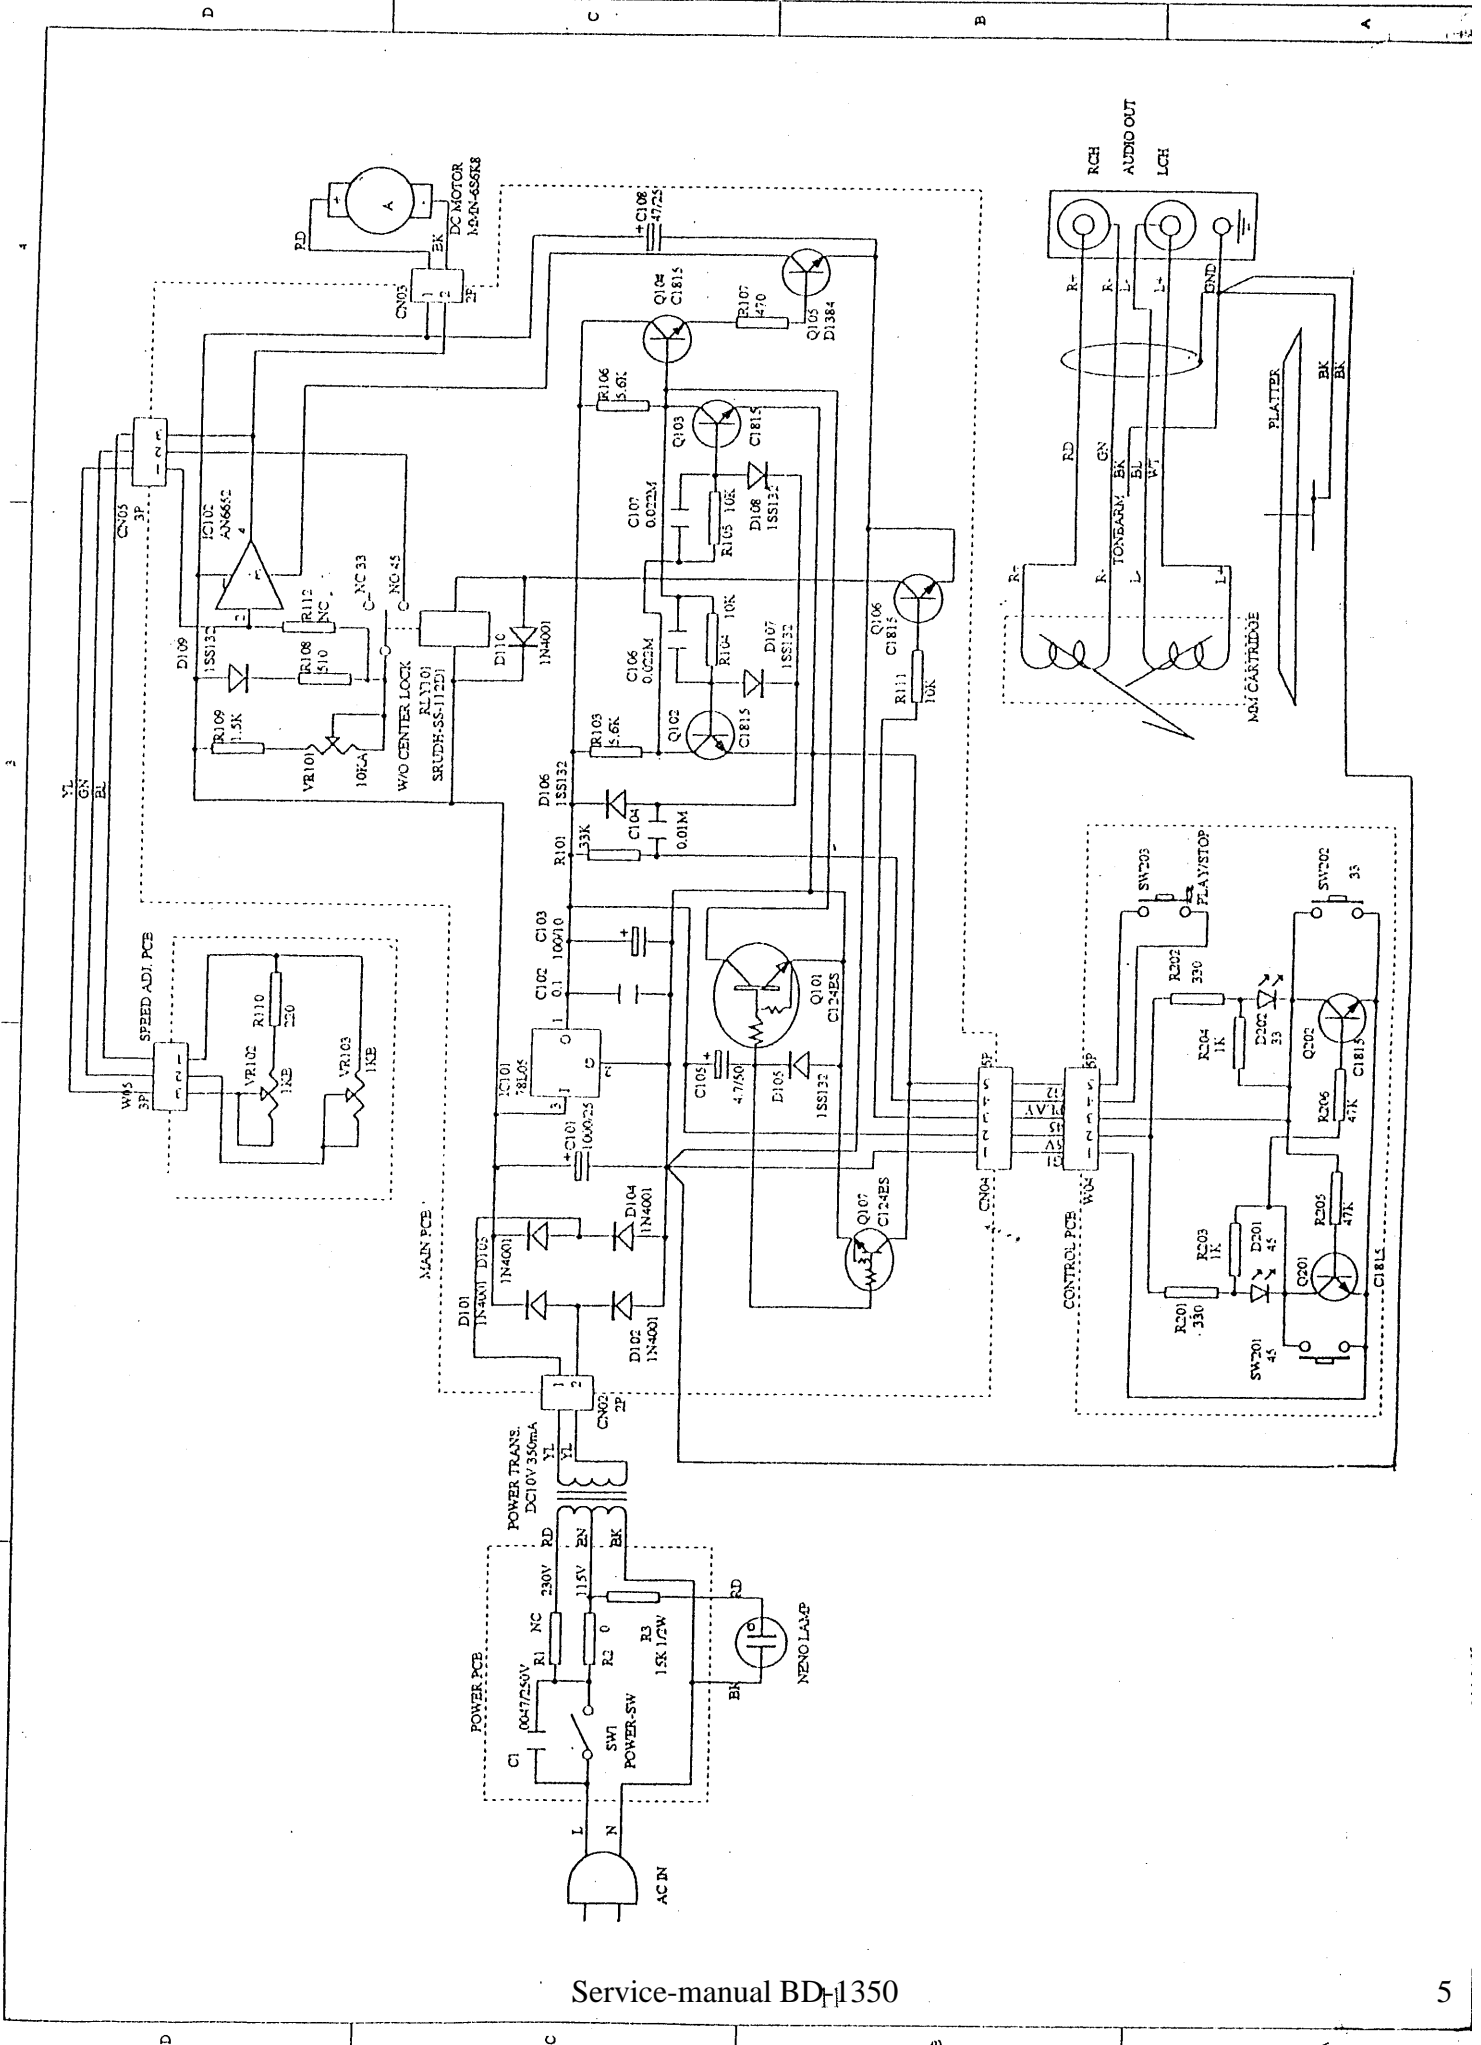

BLOCK DIAGRAM

