



**SPARE PARTS OF B-200 (230V)**

B200000H	Steel Case/Cover
B200000L	Steel Case /Base
B200000HB	Yoke
B2000002	Motor plate
B2000003	Controller Case Plate
B2000004	Vent
B2000005	Controller Case
B2000006	Prough
B2000008	Spout
B06545A	P.C.Board(Main)
B06545B	P.C.Board(IO)
C00065	P.C.B. Fastening Screw Collar
C01013	M8x12L. Screw
C01014	M8 Screw
C02031	Foot
C02045	Washer
C02065	Bubble Wheel Ring
C02072	Bubble Wheel Axle(15x55)
C02073	Bubble Wheel Axle(15x103)
C02074	Bubble Wheel Axle(15x50)
C02095	Nut
C02096	Nut
C02097	Bubble Wheel Ring
C02136	Tightening Screw
C04001	Rocker Switch/Power(Red)
C04052	Guardrail
C04099	Fuse(T1A/250V)
C04149	Fan
C05005	Cable & Plug
C15B20E-ABCD	Power Inlet Socket & Fuseholder
D01003	M4x12L. Screw
D01004	M3x8L. Screw
D01013-1	M3x6L. Screw
D01017-1	Guardrail Pin
D01030	M3x6L. Screw
D01051-1	M4x15L. Screw
D01101	M4x8L. Screw
D04034	Ring Bushing
D04103	P.C.B. Fastening Pin
HZ0013	Nut
M24002	Motor
BCT-2	Wired Remote Control
BCR-2	Wireless Radio Remote

