



SPARE PARTS OF S-100 (120V)

S10000L	Steel Case/Base	C02135	Handle	C15S10-1	Control Inlet Socket
S10000H	Steel Case/Cover	C02136	Tightening Screw	C15S10-2	Control Outlet Socket
S10000HB	Yoke	C04001	Rocker Switch/Power	C15S10-3	Power Inlet Socket & Fuseholder
AW-004	Cable For Remote Control	C04010	Rocker Switch/Snowing	D01003	M4x12L Screw
BOX005	Controller Case	C04018	Rocker Switch/Volume	D01004	M3x8L Screw
B06106	P.C. Board	C04062	Knob	D01101	M4x8L Screw
C00065	P.C.B Fastening Screw Collar	C04063	Pilot Lamp Red	D02150	Pu Tube
C01013	M8x12L Screw	C04064	Pilot Lamp Green	D04103	P.C.B. Fastening Pin
C02017	Tank	C04084	Fuse (T10A/120V)	D04107	Belted
C02031	Foot	C04141	Air Blower	D04110	Tube Belted
C02054	Angle Guide	C05016	Cable & Plug	M12020	Pump
C02070	Filter	C09050	Net Nozzle		

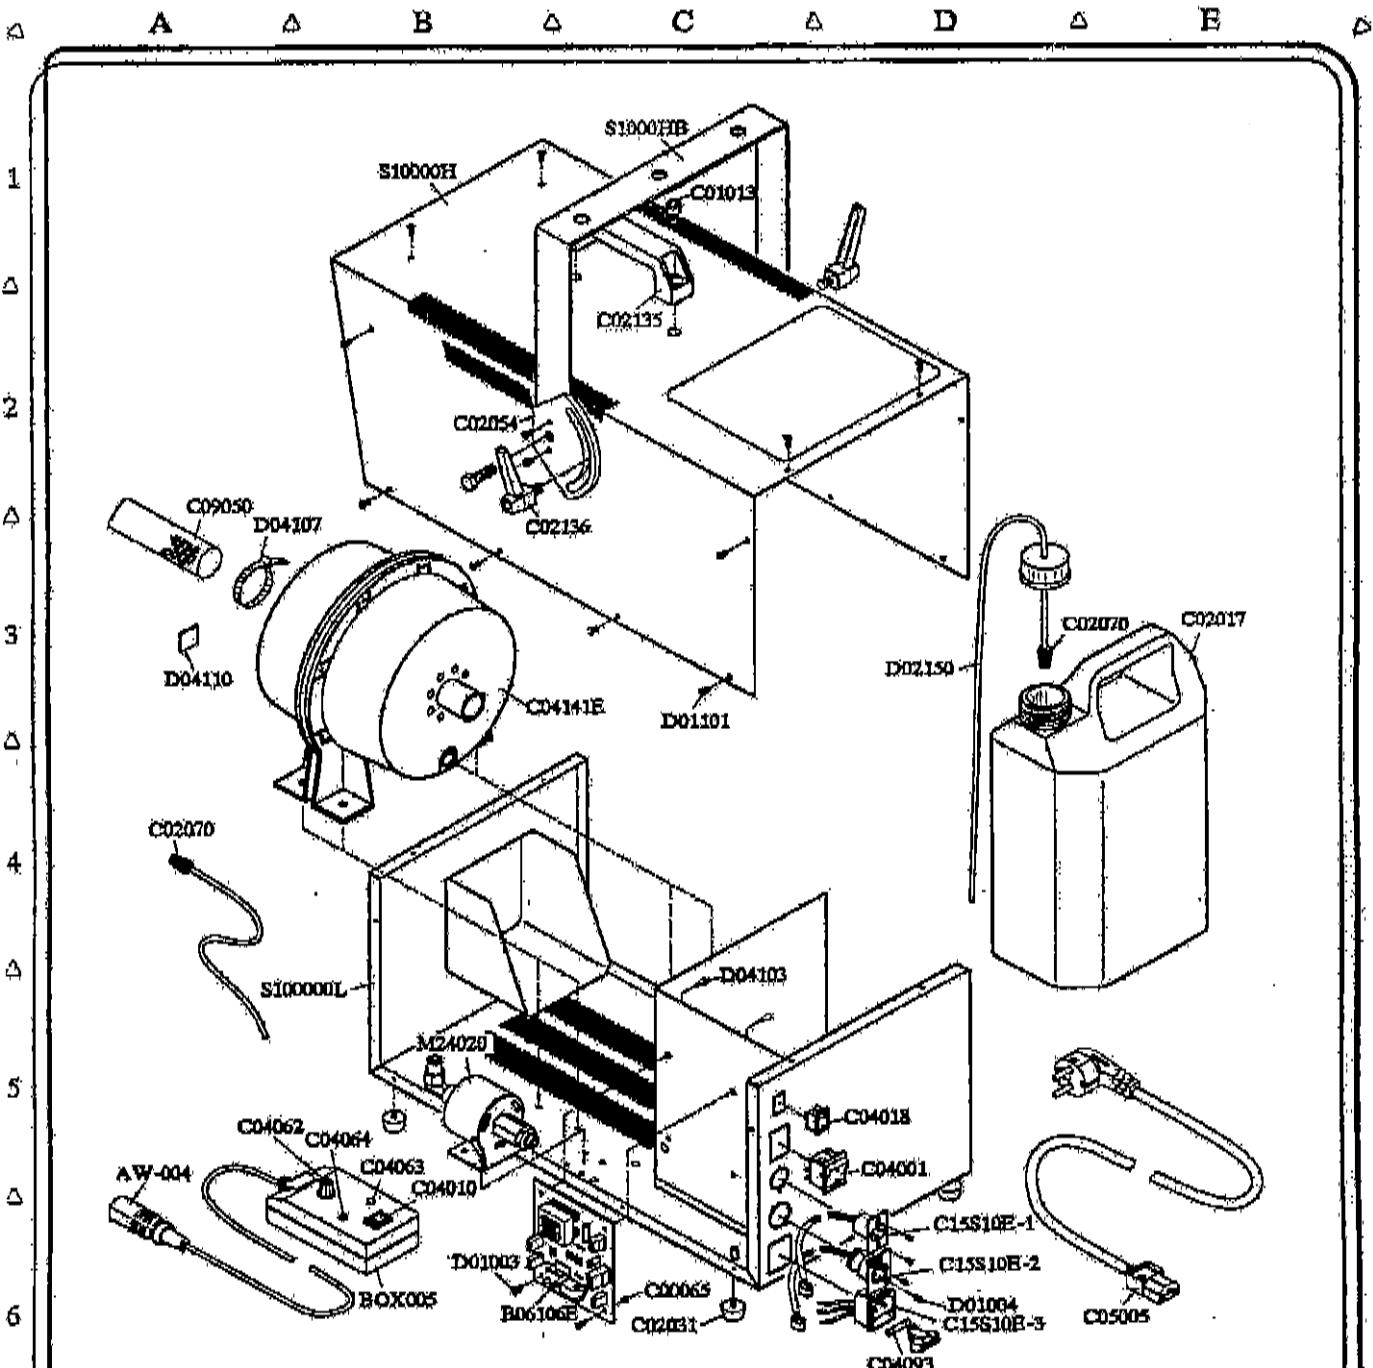

SPARE PARTS OF S-100 (230V)


S10000L	Steel Case/Base	C02135	Handle	C1SS10E-1 Control Inlet Socket
S10000H	Steel Case/Cover	C02136	Tightening Screw	C1SS10E-2 Control Outlet Socket
S10000HB	Yoke	C04001	Rocker Switch/Power	C1SS10E-3 Power Inlet Socket & Fastener
AW-004	Cable For Remote Control	C04010	Rocker Switch/Snowing	D01003 M4x12L Screw
BOX005	Controller Case	C04018	Rocker Switch/Volume	D01004 M3x8L Screw
B06106B	P.C. Board	C04062	Knob	D01101 M4x8L Screw
C00065	P.C.B Fastening Screw Collar	C04063	Pilot Lamp Red	D02150 Pu Tube
C01013	M8x12L Screw	C04064	Pilot Lamp Green	D04103 P.C.B Fastening Pin
C02017	Tank	C04093	Fuse (T5A/230V)	D04107 Belted
C02031	Foot	C04141E	Air Blower	D04110 Tube Belted
C02034	Angle Guide	C05005	Cable & Plug	M24020 Pump
C02070	Filter	C09050	Net Nozzle	

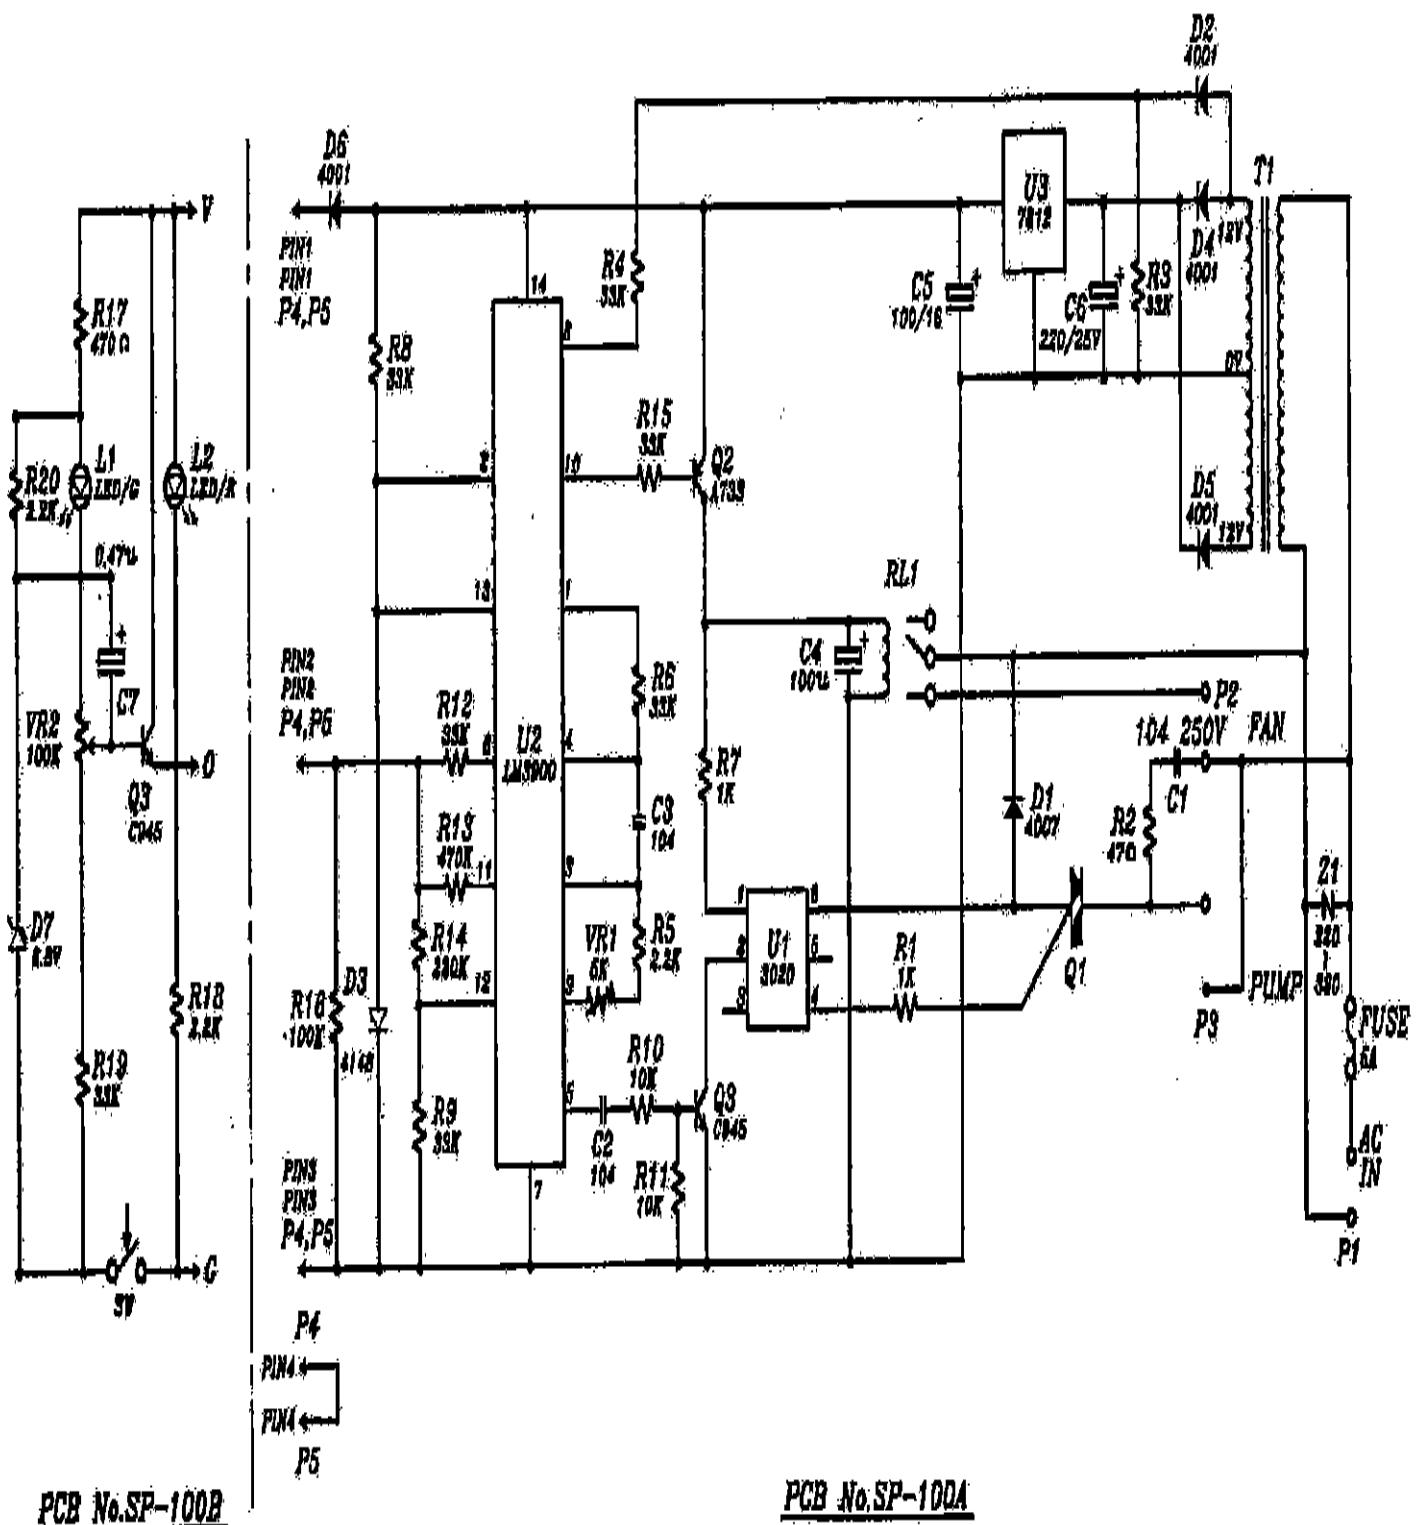

S-100 Electric Circuit Diagram

PCB No. SP-100A
PCB No. SP-100B

DWG No.FAE014

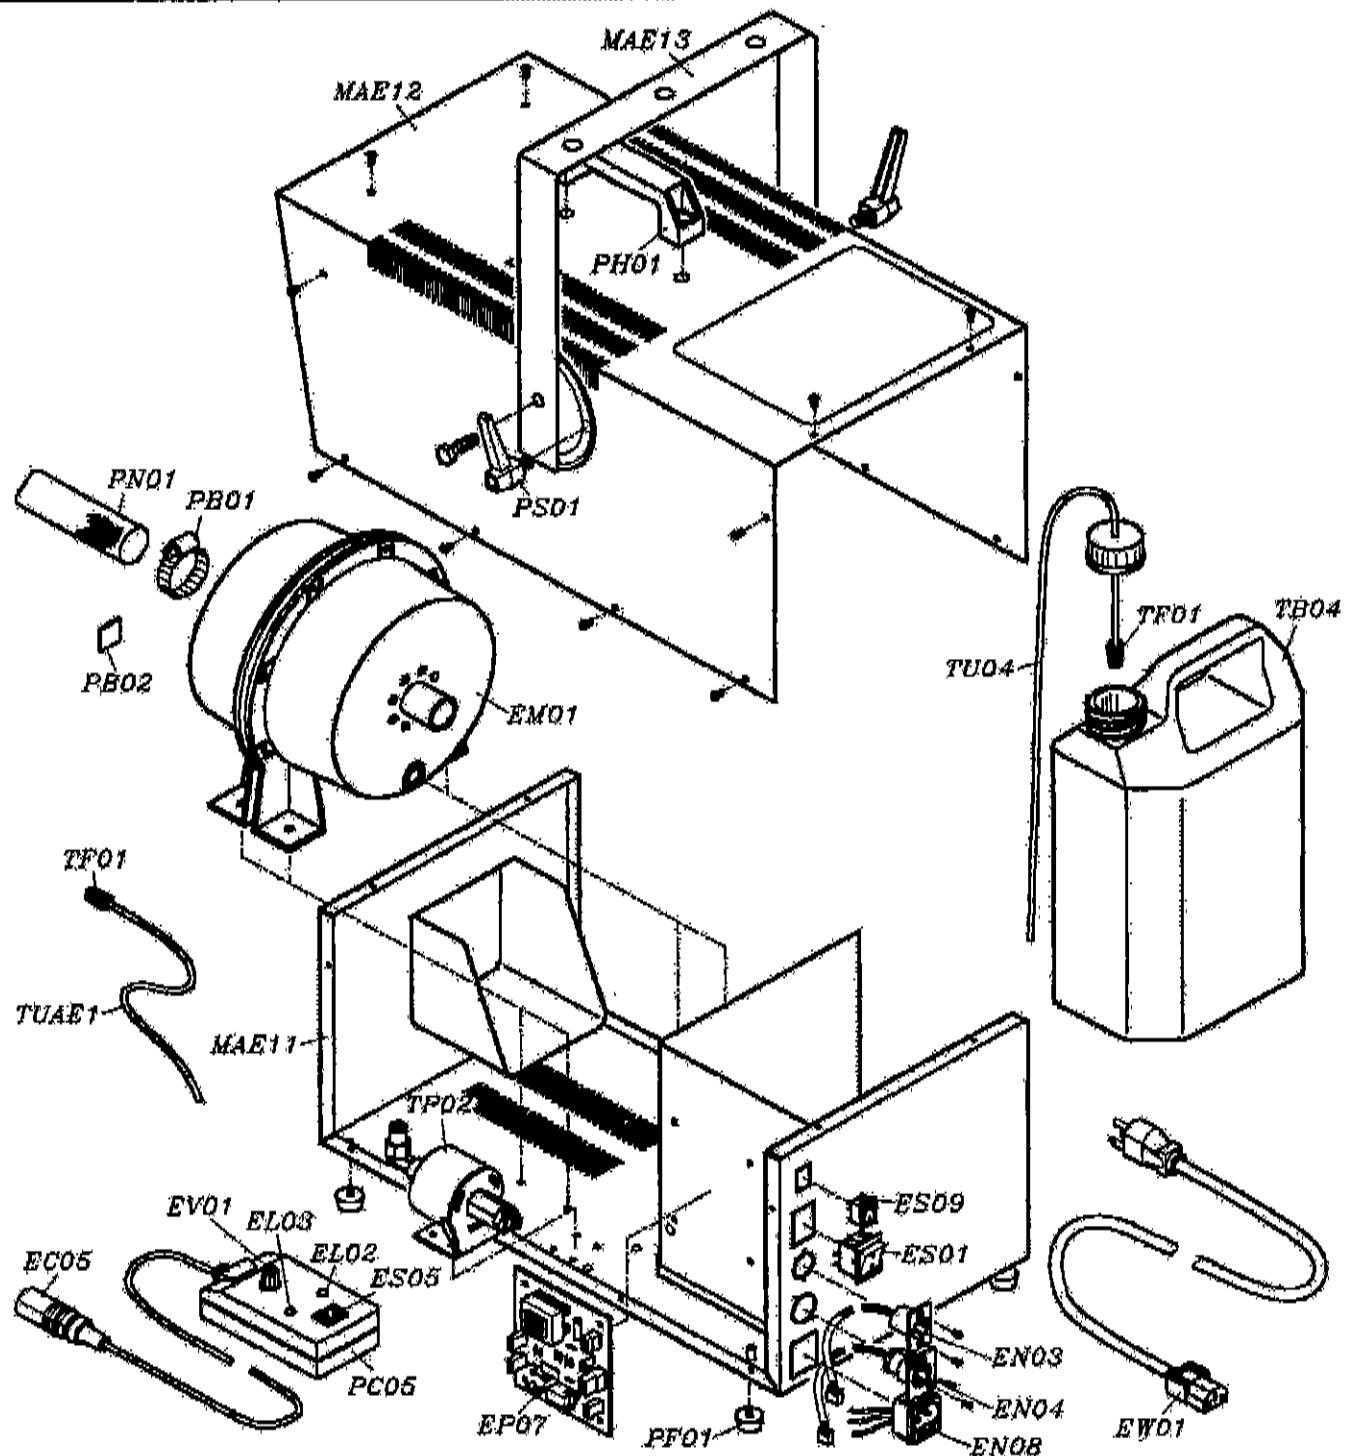


SPARE PARTS OF S-100

MAE11	Steel Case/Base
MAE12	Steel Case/Cover
MAE13	Hanging Bracket
TB04	Tank & Cap
TF01	Filter
TP02	Pump
TU04	Pu Tube Of Pump
TUAE1	Pu Tube Of Motor
EC05	Cable For Remote Control
EL02	Pilot Lamp Red
EL03	Pilot Lamp Green
EM01	Motor
EN03	Connector Of Control/Output
EN04	Connector Of Control/Input


EN08	Connector Of Power & Fuse
EP07	F.C Board
ES01	Power Switch
ES05	Snow Switch
ES09	Volume Switch
EV01	VR
EW01	Cable & Plug 115V
PB01	Belted
PB02	Tube Buckle
PC05	Controller Case
PF01	Foot
PH01	Handle
PN01	Net Nozzle
PS01	Screw With Bar

S-100 OUTWARD COMPOSITION:


- | | |
|---|--|
| 1. Body | 9. Connector for remote -control (input) |
| 2. Hanging bracket | 10. Connector for power & fuse |
| 3. Screw with bar | 11. Power cord |
| 4. Handle | 12. Wired remote control |
| 5. Tank | 13. Foot |
| 6. Volume switch | |
| 7. Power switch | |
| 8. Connector for remote -control (output) | |

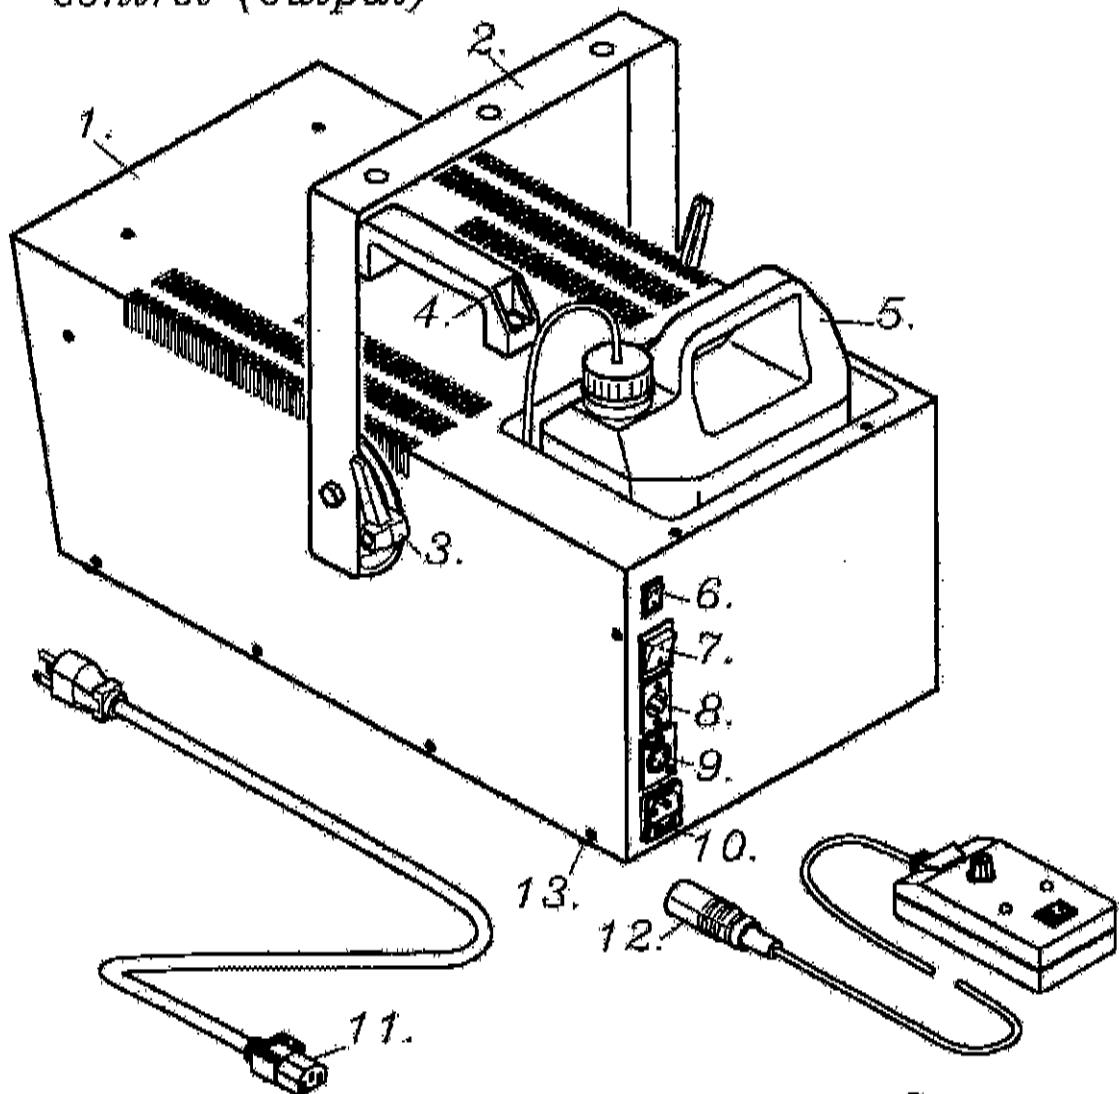

To compose position of
the hanging bracket.

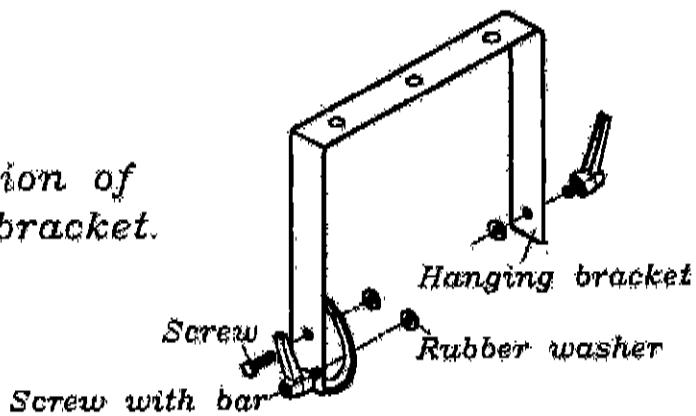

1 2 3 4 5 6 7 8

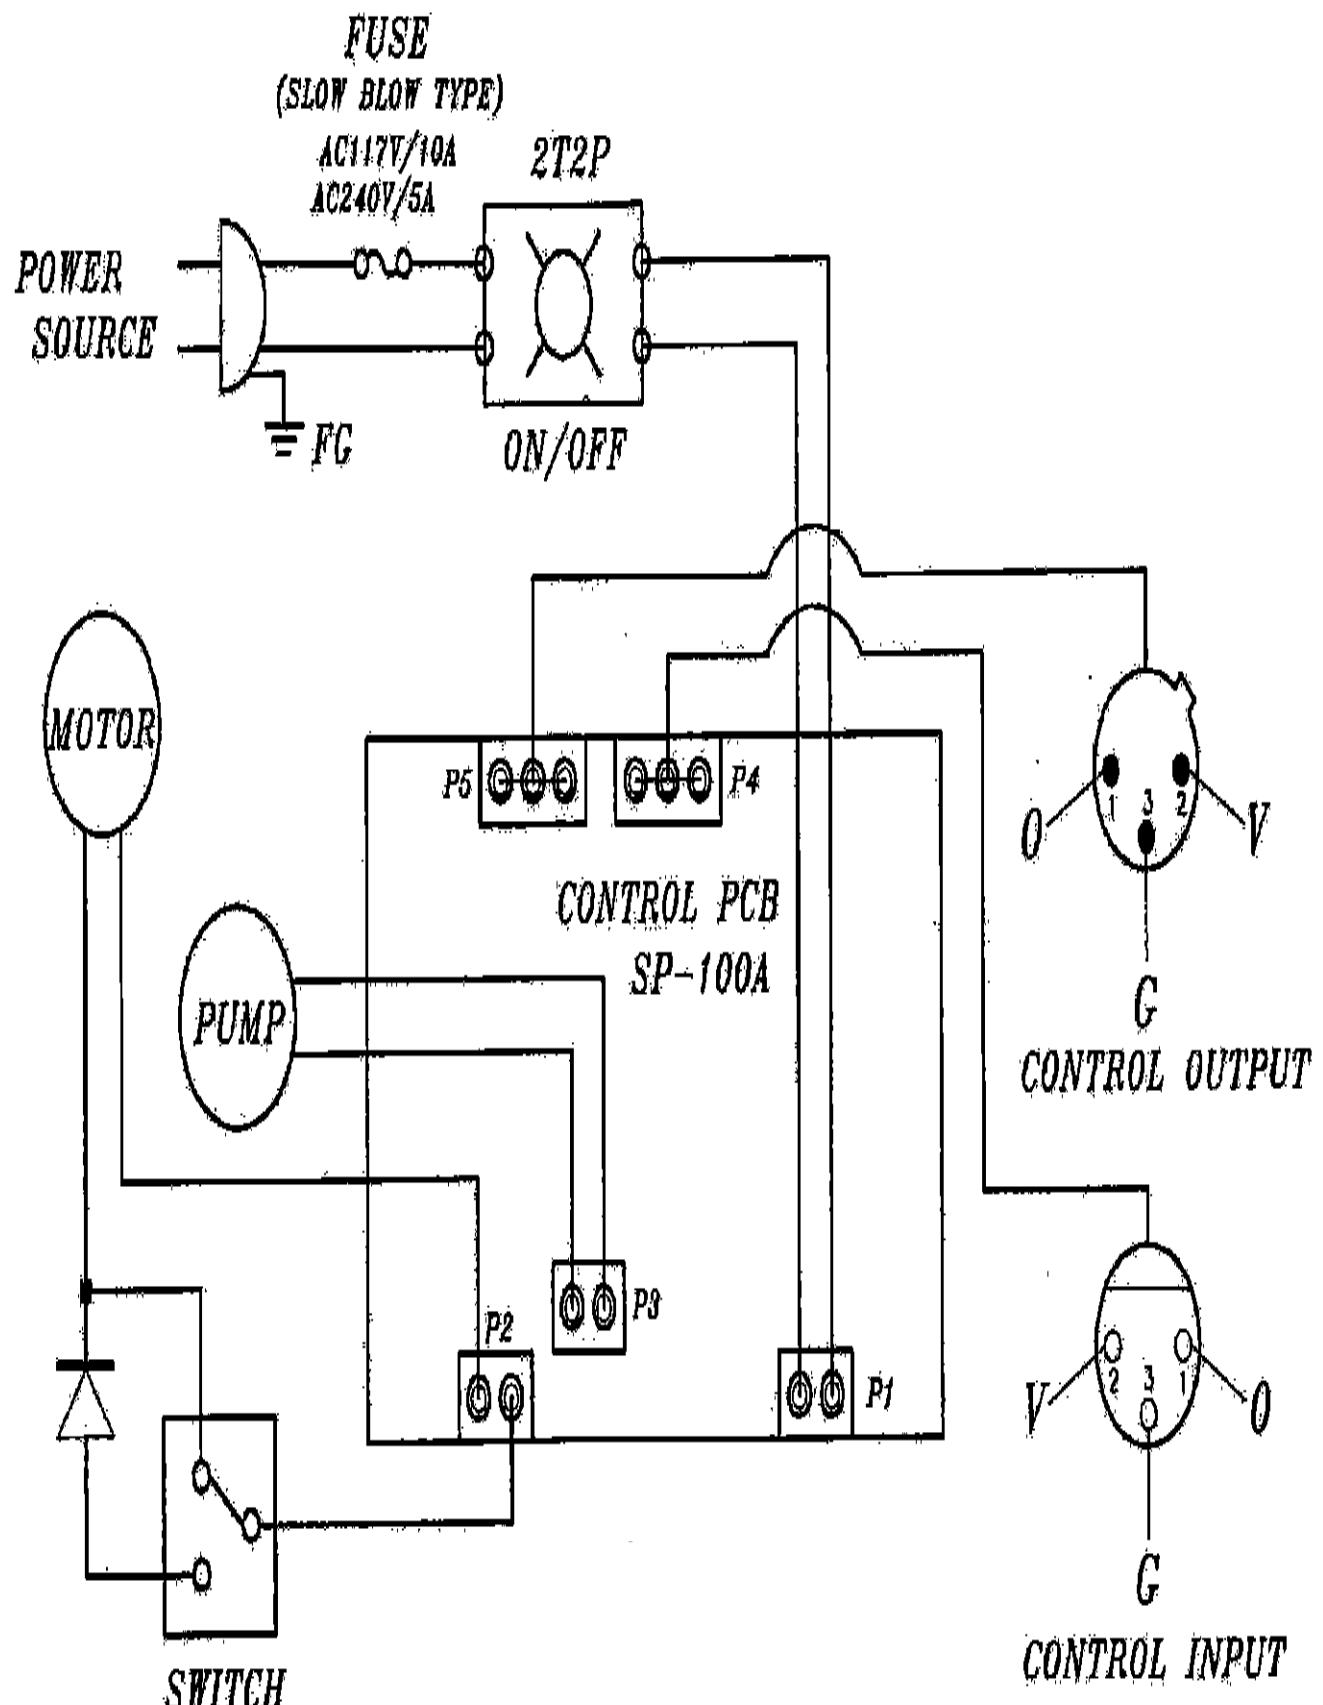

S-100 Wire Assortment Diagram

DWG No. EAE015