

DMX-protocol

Control channel 1 - Horizontal movement (Pan) (within 180°)

Push slider up in order to move the mirror horizontally (PAN).

Gradual mirror adjustment from one end of the slider to the other (0-255, 128-center). The mirror can be stopped at any position you wish.

DMX-value	Feature
0-255	Gradual adjustment of the mirror position from left to right

Control channel 2 - Vertical movement (Tilt) (within 90°)

Push slider up in order to move the mirror vertically (TILT).

Gradual mirror adjustment from one end of the slider to the other (0-255, 128-center). The mirror can be stopped at any position you wish.

DMX-value	Feature
0-255	Gradual adjustment of the mirror position from down to up

Control channel 3 - Colour-wheel

DMX-value	Feature
0-17	Open/white
18-35	Red
36-53	Yellow
54-71	Violet
72-89	Green
90-107	Orange
108-125	Blue
126-143	Pink
144-161	Light green
162-179	Light blue
180-197	Orange/yellow
198-215	Light yellow
216-233	Magenta
234-251	Bi-colour-filter (red with blue)
252-255	Bi-colour-filter (yellow with green)

Control channel 4 - Gobo-wheel

DMX-value	Feature
0-17	Open
18-35	Gobo 1
36-53	Gobo 2
54-71	Gobo 3
72-89	Gobo 4
90-107	Gobo 5
108-125	Gobo 6
126-143	Gobo 7
144-161	Gobo 8
162-179	Gobo 9
180-197	Gobo 10

198-215	Gobo 11
216-233	Gobo 12
234-251	Gobo 13
252-255	Gobo 14

Control channel 5 - Shutter, strobe

DMX-value	Feature
0-14	Shutter closed
15	Open
16-250	Strobe-effect with increasing speed
251-255	Open