

# ZUSATZINFORMATION ZUR BEDIENUNGSANLEITUNG

## ADDITIONAL INFORMATION FOR THE USER MANUAL

UPGRADE 12/11

Es ist möglich, das Gerät auf 3/4/5/6 DMX-Kanäle umzuschalten. Die DMX Modi können wie folgt umgeschaltet werden: D Taste drücken und mit + - die gewünschten Kanäle auswählen. D muss vor jedem Umschalten gedrückt werden.

It is possible to choose 3/4/5/6 DMX-channels. The DMX-modes can be set as follows: Press button D and select the desired channel with the + - buttons. D must be pressed before every change.

### 3-channel mode

Channel:	Value:	Function:
1	000 – 255	Red (0 – 100%)

Channel:	Value:	Function:
2	000 – 255	Green (0 – 100%)

Channel:	Value:	Function:
3	000 – 255	Blue (0 – 100%)

### 4-channel mode

Channel:	Value:	Function:
1	000 – 255	Red (0 – 100%)

Channel:	Value:	Function:
2	000 – 255	Green (0 – 100%)

Channel:	Value:	Function:
3	000 – 255	Blue (0 – 100%)

Channel:	Value:	Function:
4	000 – 255	Dimmer (0 – 100%)

### 5-channel mode

Channel:	Value:	Function:
1	000 – 255	Red (0 – 100%)

Channel:	Value:	Function:
2	000 – 255	Green (0 – 100%)

Channel:	Value:	Function:
3	000 – 255	Blue (0 – 100%)

Channel:	Value:	Function:
4	000 – 255	Dimmer (0 – 100%)

Channel:	Value:	Function:
5	000 – 000	No function
	001 – 005	Sound Control (7 colors) *
	006 – 010	No function
	011 – 255	Strobe (increasing)

\* If the device does not feature Sound Control, then channel 5, value 1-5 is OFF.

## 6-channel mode

CH6			CH5	CH4	CH3	CH2	CH1
MODE	DMX VALUE	FUNCTION					
1	0-15	No function	Strobe slowest to fastest 16-255 flash frequency is 0.1HZ-20HZ		Blue 0-255 (dim→bright)	Green 0-255 (dim→bright)	Red 0-255 (dim→bright)
2	16-31	Red					
3	32-47	Green					
4	48-63	Blue					
5	64-79	Cyan					
6	80-95	Yellow					
7	96-111	Purple					
8	112-127	White					
9	128-135	Color dreaming 1	Speed 0-255 (slow→quick)	Dimming 0-255 (dim→bright)	No function	No function	No function
10	136-143	Color dreaming 2					
11	144-151	Color dreaming 3					
12	152-159	Color dreaming 4					
13	160-167	Color dreaming 5					
14	168-175	Color dreaming 6					
15	176-183	Color dreaming 7					
16	184-191	Color dreaming 8					
17	192-199	Color change1					
18	200-207	Color change 2					
19	208-215	Color change 3					
20	216-223	Color change 4					
21	224-231	Color change 5					
22	232-239	Color change 6					
23	240-247	Color change7					
24	248-255	Color change8					

### LED Display

- If Red LED's glow you are in DMX Mode 1: 3 DMX Channels
- If Green LED's glow you are in DMX Mode 2: 4 DMX Channels
- If Blue LED's glow you are in DMX Mode 3: 5 DMX Channels
- If Red and Green LED's glow you are in DMX Mode 4: 6 DMX Channels