 
 
 
 


Typ/Type/Type/Tipo: LCD-12 DMX
 Spannungsversorgung/Power supply/Alimentation/
 Alimentación: 15-18 V DC, 0.3 A rms
 Gesamtanschlusswert/Power consumption/Puissance de
 rendement/Consumo: 6 W

eurolite
 MADE IN CHINA

AUDIO INPUT
 100mV -1Vpp

DC POWER
 DC 15V~18V
 300mA min



Vor Gebrauch Anleitung lesen. Gerät vor Feuchtigkeit schützen! Niemals das Gerät öffnen! Im Gerätinneren befinden sich keine zu wartenden Teile. Wartungs- und Servicearbeiten nur durch autorisierten Fachhandel!
 Read user manual before use. Keep away from moisture! Never open the housing! There are no serviceable parts inside the device. Maintenance and service operations only by authorized dealers.
 Lire le mode d'emploi avant l'utilisation. Ne pas exposer à l'humidité. Ne jamais ouvrir le boîtier! L'intérieur de l'appareil ne contient pas de parties nécessitant un entretien. L'entretien et les réparations seulement par un revendeur autorisé!
 Lea el manual del usuario antes de la puesta en marcha. Proteja de la humedad! ¡Nunca abrir la caja! No hay piezas que necesiten de servicio dentro del aparato. Operaciones de mantenimiento y servicio únicamente por distribuidores autorizados.

SPECIAL

- 53 built-in chasing programs.
- Hold dimmer / Hold sound/Prog sound / Prog speed / Auto sound / Auto speed / Memory Normal speed or under controlled by tap sync
- By built-in microphone or line input (100 mV-1Vpp)
- Full on and flash ,stand by.

MODE	FUNCTION
Hold dimmer	• Channel output is controlled by "channel dimmer" or "master dimmer control".
Hold sound	• Controlled by "channel dimmer" and "music level".
Prog sound	• Any one of 53 pre-set program can be select by "prog select" press "prog select" button once more, program will be increased one; press "prog select" + "mode select", program will be reversed one.
Prog speed	• Operation according to the prog sound, chase speed is controlled by "speed control" or "tap sync".
Auto speed	• Operation according to the prog speed. Each program will be executed eight times then next program.
Auto sound	• Operation according to prog sound, each program will be executed eight times. Then next program.
Memory	• Up to 10 steps can be memorized. • "Prog select" + stand by" you can select desire operating mode from program/ manual/ Auto sound/ Auto speed corresponding to digit indication" PR, SE, RS " And" RP ".
"PR"	• You can make program in this way fill "10" appears.
"SE"	• "Prog select" once more, program will be executed one step.
"RS"	• Program is executed according to the music rhythms.
"RP"	• Program is executed automatically.