


# **DIMAVERY**

## **SGKT-15 Stimmgerät**

Vielen Dank, dass Sie sich für das DIMAVERY SGKT-15 Stimmgerät entschieden haben. Vor Inbetriebnahme lesen Sie sich bitte folgende Nutzungshinweise durch.

---

### **Bedienungsanleitung**

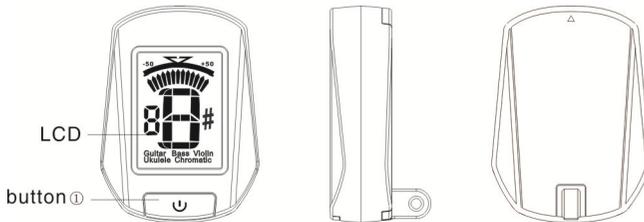

- Wenn Sie eine Batterie eingesetzt haben, halten Sie die Taste gedrückt, bis das Display aufleuchtet.
  - Schalten Sie die Stimm-Modi zwischen **G** (Gitarre), **B** (Bass), **V** (Violine), **U** (Ukulele) und **C** (Chromatisch) durch, indem Sie die Taste kurz drücken.
  - Bringen Sie das Stimmgerät an Ihrem Instrument an. Das Stimmgerät registriert Töne über einen Piezo-Tonabnehmer anhand der Schwingungen des Instruments.
  - Das Display zeigt den gespielten Ton und die Stimmung an. Ist der Ton zu tief, leuchtet der linke Bereich auf. Ist der Ton zu hoch, leuchtet der rechte Bereich auf. Um den Ton in Stimmung zu bringen, muss die Anzeige in der Mitte sein und das Display grün aufleuchten.
- 

### **Features:**

- Stimmmodi: Gitarre, Bass, Violine, Ukulele, Chromatisch
  - Stimm-Umfang: D1 (36,7 Hz) - C7 (4186,00 Hz)
  - Stimmfrequenz: 415 - 466 Hz
  - Präzision: +/- 1 cent
  - Integriertes Tap-Tempo-Metronom
  - Display um 360° rotierbar
  - Farbe: schwarz
- 

### **Technische Daten:**

Spannungsversorgung:	Knopfzellen-Batterie
Maße (LxBxH):	45 x 45 x 90 mm
Gewicht:	400 g

---


# **DIMAVERY**

## **SGKT-15 Tuner**

Thank you very much for purchasing the DIMAVERY SGKT-15 Tuner. Please read the following instructions before using the device.

---

### **User Manual**

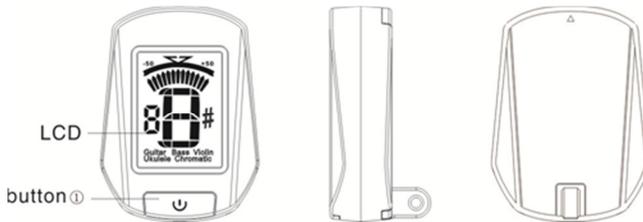

- After installing the battery, press the button until the display lights up.
  - Switch between tuning mode **G** (guitar), **B** (Bass), **V** (Violin), **U** (Ukulele) and **C** (chromatic) by pressing the button.
  - Clip the tuner on to your instrument. The tuner picks up the tones by the vibrations of the instrument via a piezo pickup.
  - The display shows the played note and the tuning pitch. If it is too low, the left side of the indicator lights up. If the note is too high, the right side lights up. To tune the note correctly, the indicator must be in the middle and the screen lights up green.
- 

### **Features:**

- Tuning modes: Guitar, Bass, Violin, Ukulele, Chromatic
  - Tuning range: D1 (36,7 Hz) – C7 (4186,00 Hz)
  - Frequency: 415 – 466 Hz
  - Precision:  $\pm 1$  cent
  - Integrated tap tempo metronome
  - Display 360° rotatable
  - Color: black
- 

### **Technical Data:**

Spannungsversorgung:	Knopfzellen-Batterie
Maße (LxBxH):	45 x 45 x 90 mm
Gewicht:	400 g

---